


INSTALLATION NOTES

1. Set door speeds, force, time delay and verify proper door operation prior to final connection of sensors system.
2. Primary activation must be Knowing Act. If not then technician **MUST WALK TEST** to verify function and detection patterns comply with ANSI/BHMA A156.10 requirements.
3. On Knowing Act applications, push/pull activation must be disabled.
4. When using two controls (Sim Pair, Double Egress) connect OC-904 wires (except purple wires) to CU ESD Master control. Ensure sync cable is installed between CU-ESD boards.

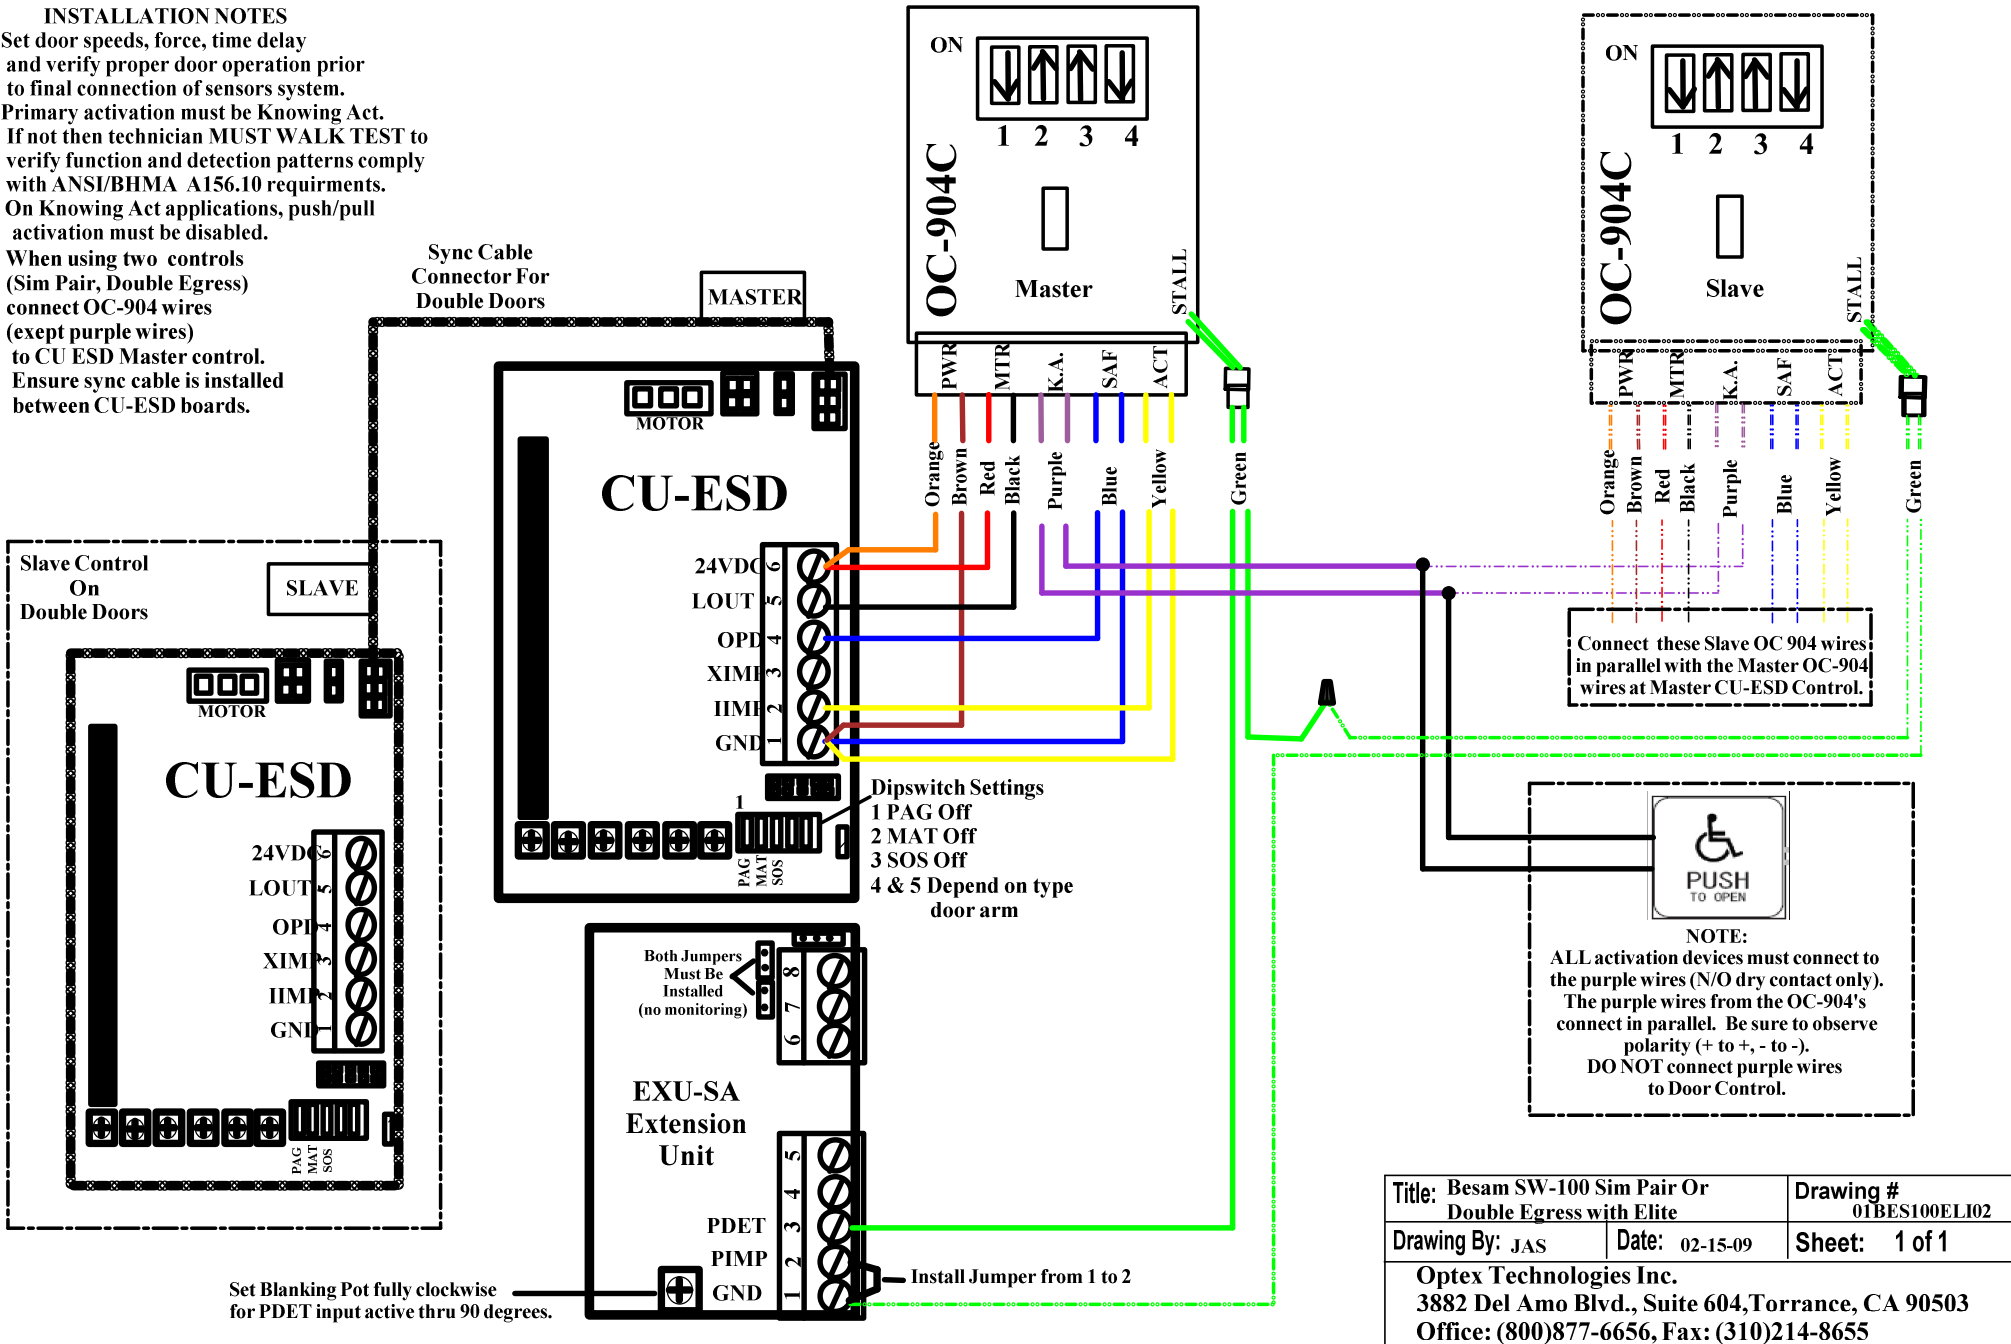

Title: Besam SW-100 Sim Pair Or Double Egress with Elite	Drawing # 01BES100ELI02
Drawing By: JAS	Date: 02-15-09
Sheet: 1 of 1	
Optex Technologies Inc. 3882 Del Amo Blvd., Suite 604, Torrance, CA 90503 Office: (800)877-6656, Fax: (310)214-8655	